


TRAFFIC PATTERN OPERATIONS

Application of traffic pattern indicators

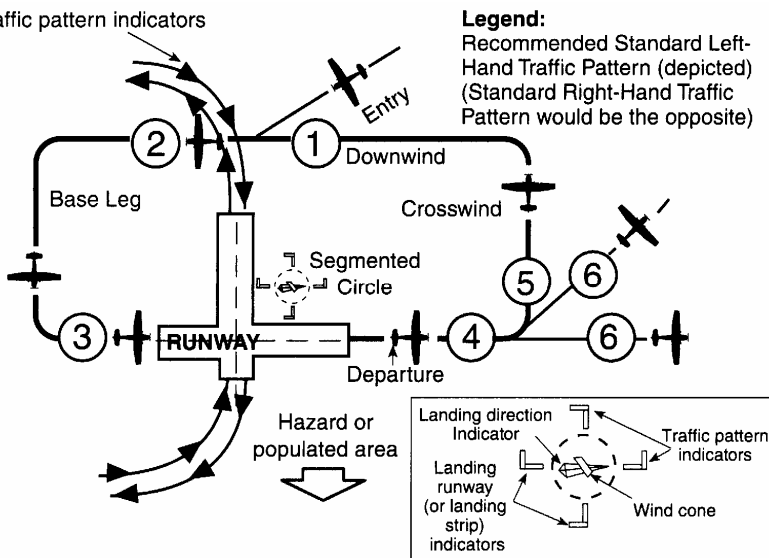

KEY TO TRAFFIC PATTERN OPERATIONS

1	Enter pattern in level flight, abeam the midpoint of the runway at pattern altitude. (<u>1,000 AGL is recommended pattern altitude unless established otherwise...</u>).
2	Maintain pattern altitude until abeam approach end of the landing runway on downwind leg.
3	Complete turn to final at least 1/4 mile from the runway.
4	Continue straight ahead until beyond departure end of runway.
5	If remaining in the traffic pattern, commence turn to crosswind leg beyond the departure end of the runway within 300 feet of pattern altitude.
6	If departing the traffic pattern, continue straight out, or exit with a 45 degree turn (to the left when in a left-hand traffic pattern; to the right when in a right-hand traffic pattern) beyond the departure end of the runway after reaching pattern altitude.
7	Do not overshoot final or continue on a track which will penetrate the final approach of the parallel runway.
8	Do not continue on a track which will penetrate the departure path of the parallel runway.

Legend:
Recommended Standard Left-Hand Traffic Pattern (depicted)

